

System Trouble Alerts


The system monitors itself for abnormal operating conditions and will alert you if trouble is detected.


The system monitors these and other conditions:


- AC power to the Control Panel
- The telephone line (optional)
- The cellular telephone connection (if used)
- The Control Panel's backup battery
- The sensor's batteries
- Sensor supervisory status (if used)
- External sounder connection
- Sensor radio reception and sensor tampering (sensor's case opened) when disarmed
- Control Panel tampering (panel's case opening) when disarmed (optional).
- Communication to the Central Station


Trouble conditions can be reported to the Central Monitoring Station. Service to correct the trouble condition should be performed as soon as possible.

Trouble Alert Icon




If the system detects trouble, it will flash the trouble alert  icon on the Security Screen and sound six alert beeps every minute. Scrolling text along the top of the display also describes the trouble condition(s) that exist.


The trouble alert  icon displays a number in the upper right corner that is the number of current trouble alerts.

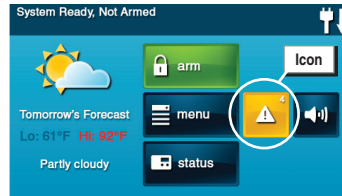The trouble alert  icon will flash until the trouble alerts are acknowledged, then it will light constant until all the troubles are corrected. When all troubles are corrected, the icon will disappear.



Trouble Alert Icon

1. Press the trouble alert  icon button to display all current trouble alerts.
2. View the listed trouble events. If there are more than three alerts, use the  and  arrows to scroll through the list.
3. After viewing the trouble events, press **OK** to acknowledge. This will silence the alert beeps.

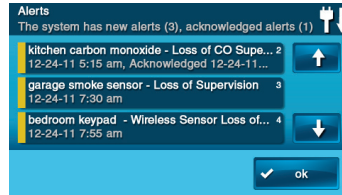

Trouble Alert List

Nighttime Trouble Alert Holdoff

As an option, the system can be programmed by your installer to suppress the trouble alert sounder from 10 PM to 9 AM. Any trouble alerts will still be displayed and reported (if enabled), but the sounder will not beep. Some trouble conditions may clear automatically, other trouble conditions may require service to correct. If the trouble condition still exists after 9 AM, the sounder will beep to indicate trouble. Regardless of whether the trouble alert sounder is suppressed or not, every trouble condition is always displayed on the trouble alert list and recorded in the system history event log.