










SYSTEM OVERVIEW













About the Display and Indicators

Display Definitions

ICON	TEXT	DEFINITION
	Ready to Arm	Displayed along with the the text "Ready To Arm" when system is Disarmed and ready to arm.
	Armed Away	"Armed Away" is displayed along the top of the screen. An armed away icon along with "Armed Away" is displayed after the exit delay expires.
	Armed Stay	"Armed Stay" is displayed along the top of the screen. An armed stay icon along with "Armed Stay" is displayed after the exit delay expires.
	Exit Now 28 Seconds	"Armed Stay – Exit Now" or "Armed Away – Exit Now" is displayed in a red status bar along the top of the screen. An exit icon along with "Exit Now" and the time remaining (i.e.; "28 Seconds") is displayed during the exit delay.
	Alarm	"Alarm" is displayed in a red status bar along the top of the screen. An alarm (bell) icon along with "Alarm" is displayed alternately with the Zone that has caused the alarm.
 OR 	Fault (Zone No.& Description)	"Not Ready To Arm – Fault" is displayed in a yellow status bar along the top of the screen. An open window or door icon along with the zone descriptor and "Window" or "Door" is displayed when a window or entry/exit fault has been detected. OR Displayed alternately with the alarm (bell) icon and "Alarm". "Alarm" is also displayed in a red status bar along the top of the screen.
	Fire OR Fire Alarm 95 Fire	The fire icon is displayed with alternating text "Fire" and "Fire Alarm 95 Fire". "Fire Alarm" is also displayed in a red status bar along the top of the screen.
	Alarm 96 Medical	The Medical icon displayed when a medical alarm is activated. "Alarm" is also displayed in a red status bar along the top of the screen. (If programmed for display by your installer)

SYSTEM OVERVIEW

About the Display and Indicators

ICON	TEXT	DEFINITION
	Alarm 99 Police	The alarm (bell) icon when a burglary alarm is activated. "Alarm" is also displayed in a red status bar along the top of the screen. (If programmed for display by your installer) No display if 24 Hour Silent Response Type has been programmed.
	CO Alarm	Displayed alternately with Carbon Monoxide when a CO alarm is activated. "CO Alarm" is also displayed in a red status bar along the top of the screen.
	Cover Tamper	A check system icon along with "Cover Tamper" is displayed when a cover tamper has been detected. "Ready To Arm – System Trouble" is displayed in a yellow status bar along the top of the screen.
	Reporter Failure	The system has identified a problem with the telephone dialer.
	Low Battery	"Not Ready To Arm – System Trouble" is displayed in a yellow status bar along the top of the screen. A low battery icon along with "Low Battery" is displayed when the system's backup battery power is low.
	90 RF Jam	Appears when the system has detected an RF jamming condition or excessive interference.
	94 Phone Line Cut	Appears when the system has detected a loss of telephone service.
	AC Loss	Displayed when the system has lost AC power. "Ready To Arm – System Trouble" is displayed in a yellow status bar along the top of the screen.
	Automation	Displayed when the system has detected a Z-Wave Device Failure
	Fault * Garage Door	Displayed when the Garage Door has been opened. Ready To Arm – Fault" is displayed in a yellow status bar along the top of the screen. (* Applicable Zone Number)
	(Not applicable)	Displayed in the upper left corner of the status bar. Indicates that the system is connected to a WiFi source.
	Not applicable)	Displayed in the upper left corner of the status bar. Indicates that the system is NOT connected to a WiFi source.