SUMMARY OF AUDIBLE & VISUAL NOTIFICATIONS

SOUND	CAUSE	ANNOUNCEMENT*
INTERRUPTED	FIRE ALARM (3 beeps)	fire alarm + zone voice descriptor
	OR	OR
	CARBON MONOXIDE ALARM (4 beeps)	Carbon monoxide alarm + zone voice descriptor
		(Voice descriptor is interlaced with the sounder
		and sounds every 45 seconds)
CONTINUOUS	BURGLARY/AUDIBLE EMERGENCY	alarm + zone voice descriptor
	ALARM	(Voice descriptor is interlaced with the sounder
		and sounds every 45 seconds)
ONE SHORT BEEP	a. SYSTEM DISARM	a. disarmed-ready to arm
(not repeated)	b. SYSTEM ARMING ATTEMPT WITH AN	b. disarmed-not ready to arm
	OPEN ZONE.	
	c. BYPASS VERIFY	c. zones bypassed
ONE SHORT BEEP	a. SYSTEM IS IN TEST MODE	a. no announcement
(once every 45 secs)	b. LOW BATTERY AT A TRANSMITTER	b. low battery + zone voice descriptor
	c. SYSTEM LOW BATTERY	c. system low battery
	d. FAIL TO COMMUNICATE	d. check system
TWO SHORT	ARM AWAY	armed away [instant] – exit now
BEEPS		
THREE SHORT	a. ARM STAY OR INSTANT	a. armed stay [instant] – exit now
BEEPS	b. ZONE OPENED WHILE SYSTEM IS IN	b. zone voice descriptor
	CHIME MODE.	
RAPID BEEPING	a. TROUBLE	a. fault + zone voice descriptor
	b. MEMORY OF ALARM	b. fire alarm or alarm + zone voice descriptor
SLOW BEEPING	a. ENTRY DELAY WARNING	a. disarm system now
	b. EXIT DELAY WARNING	b. armed [away] [instant] - exit now

Additional Announcements:

The system will announce the following primary messages, depending on the system's status at the time:

- Disarmed-Ready to Arm [check system]
- Disarmed [not ready to arm]
- Armed [away] [stay] [instant] [check system] [exit now]

The system will announce the following secondary messages, depending on the system's status at the time:

- Fire Alarm + zone voice descriptor
- Alarm + zone voice descriptor
- Carbon Monoxide Alarm + zone voice descriptor
- Carbon Monoxide Fault + zone voice descriptor
- Fire Fault + zone voice descriptor
- Fault + zone voice descriptor Alarm + zone voice descriptor
- Low Battery + zone voice descriptor Fire Fault + zone voice descriptor
- System Low Battery
- Check System
- AC Loss
- Zones Bypassed
- Chime

Note: If there are no secondary messages, the primary status messages will be announced.